

# Powerdot Mini

□ 935-PM50W

■ 935-PM50

**POWER**  
**dot**

- A** - Installation into round hole  
**B** - Installation into tailored hole

## CONTENT:




x1




x1


- 1A** DRILL  
Drill a hole in the table.

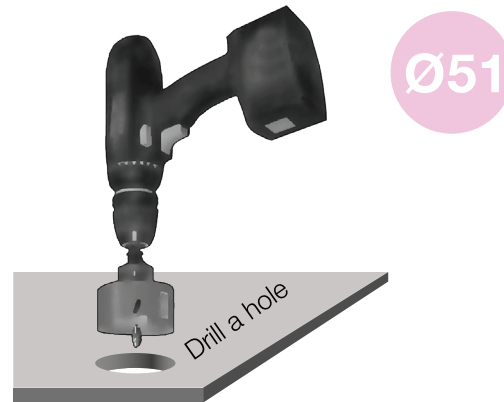

- 2A** INSERT  
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

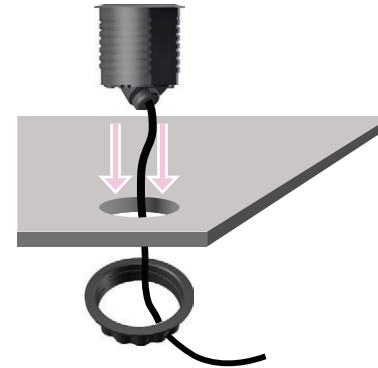


- 3A** TURN CLOCKWISE & PLUG IN  
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

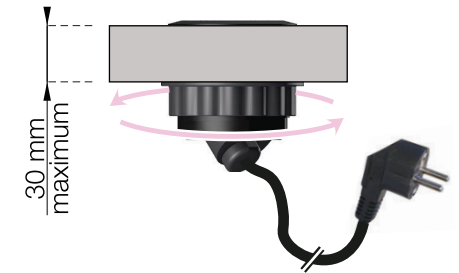


- 1 Schuko socket  
/w 1250 mm cable



- 1B** MILL  
Mill a hole in the table.

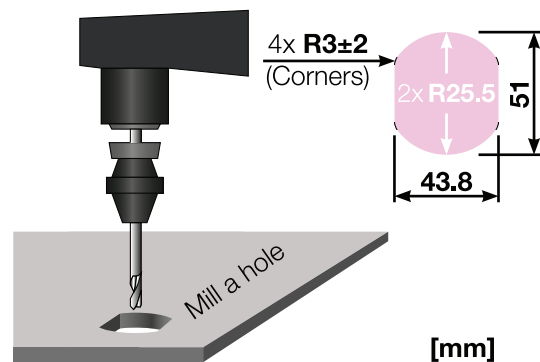

- 2B** INSERT  
Insert Powerdot into the hole and feed the power plug through the table and the plastic fastening nut.

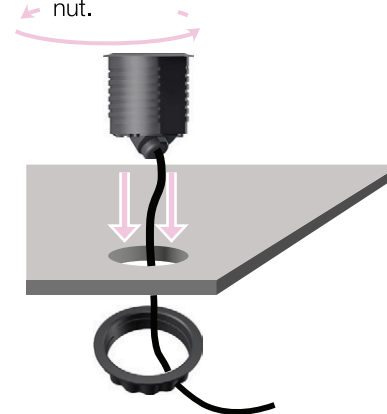

- 3B** TURN CLOCKWISE & PLUG IN  
Turn the plastic fastening nut as far up the thread as possible. Make sure it has been thoroughly tightened. Lastly, plug the Schuko plug into the wall socket.

